





ABS 62-68 CADILLAC DISC KIT

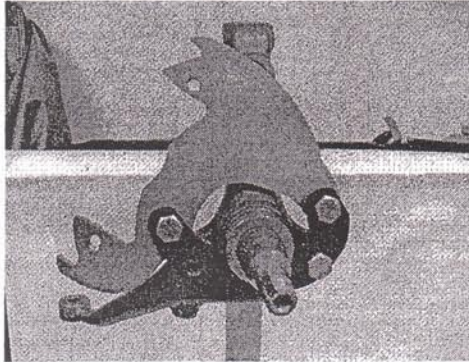


Once the spindle is completely clear, place the caliper-mounting bracket in front on the face of the spindle with the bolts through the mounting bracket with threads towards the back of the mounting bracket.


*Next put the spacer and bearing to the spindle

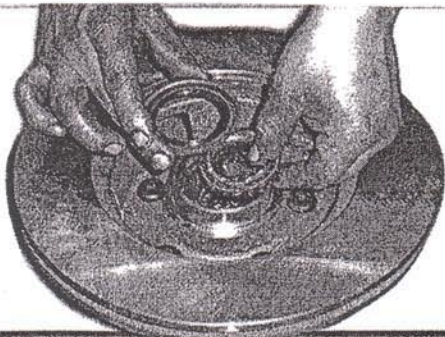

Next, place the rotor face down and install the bearings using wheel bearing grease. Make sure that you pack the wheel bearings. To do this, place a large dollop of grease in the palm of your hand. With your other hand, push the bearing into the grease from the back side and rotate the bearing until you see the grease coming out the other side.

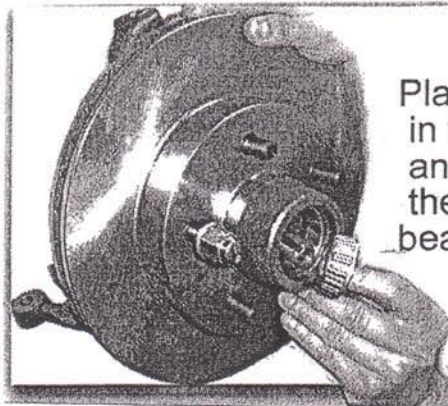

Place the rotor in the spindle and next the outer bearing.

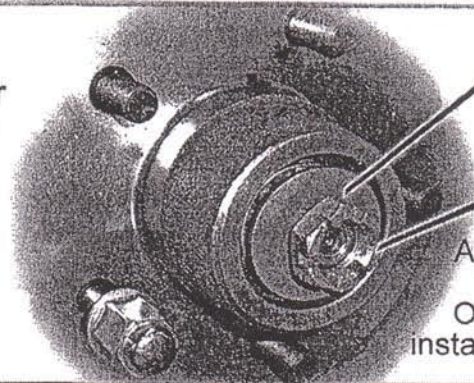

Washer
Nut
After the bearing, install the washer and nut. Once the nut is tightened install cutter pin and dust cap.

Now, install the brake caliper with the bleeder screw facing up and the caliper piston to the inside. Once everything fits correct, mount the drive pins through the caliper and into the caliper mounting bracket. Turn the rotor to make sure that it is not binding on the caliper and tighten the pins.
* Make sure the bleeder screw is facing up.
Now, bleed your system.

